




INSTRUCTIONS FOR INSTALLATION AND USE




Traceur solaire 1 axe 4 panneaux







- Make sure that the two arms are perfectly parallel

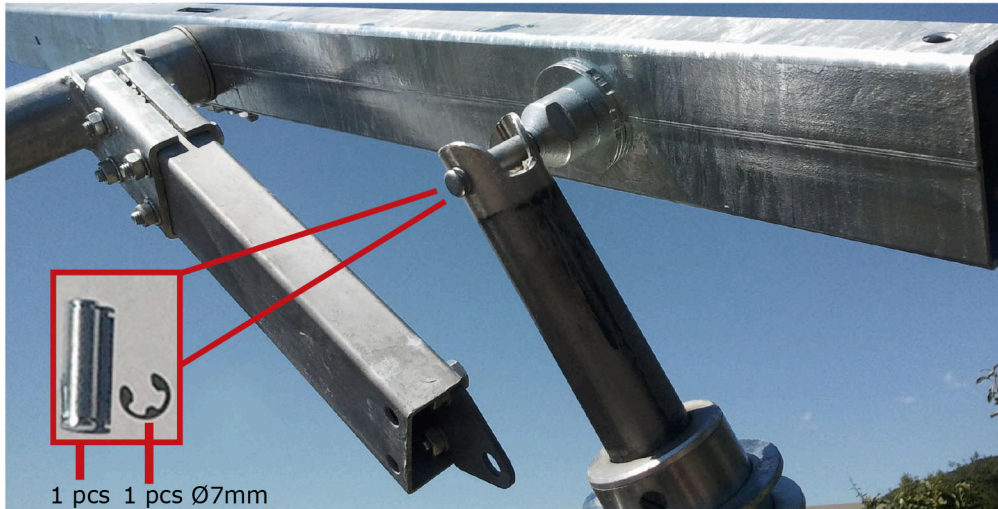

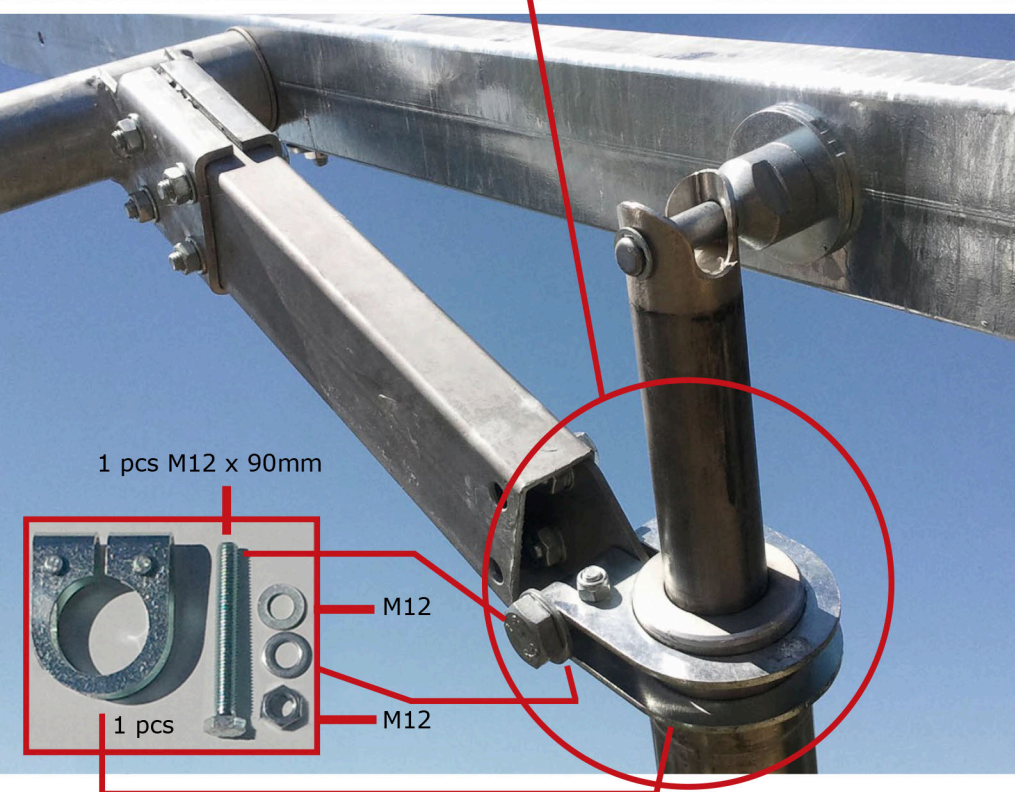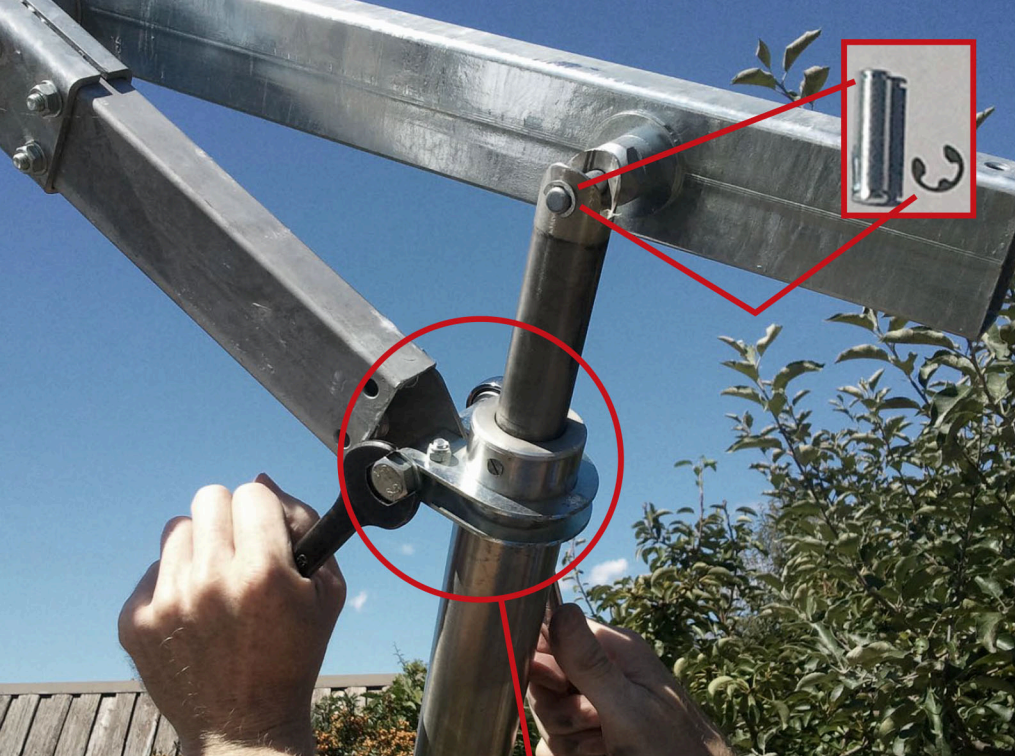


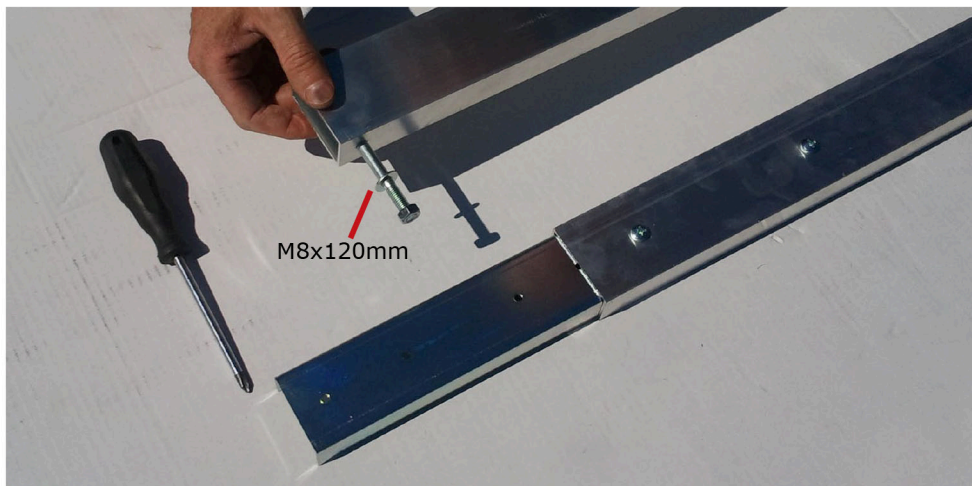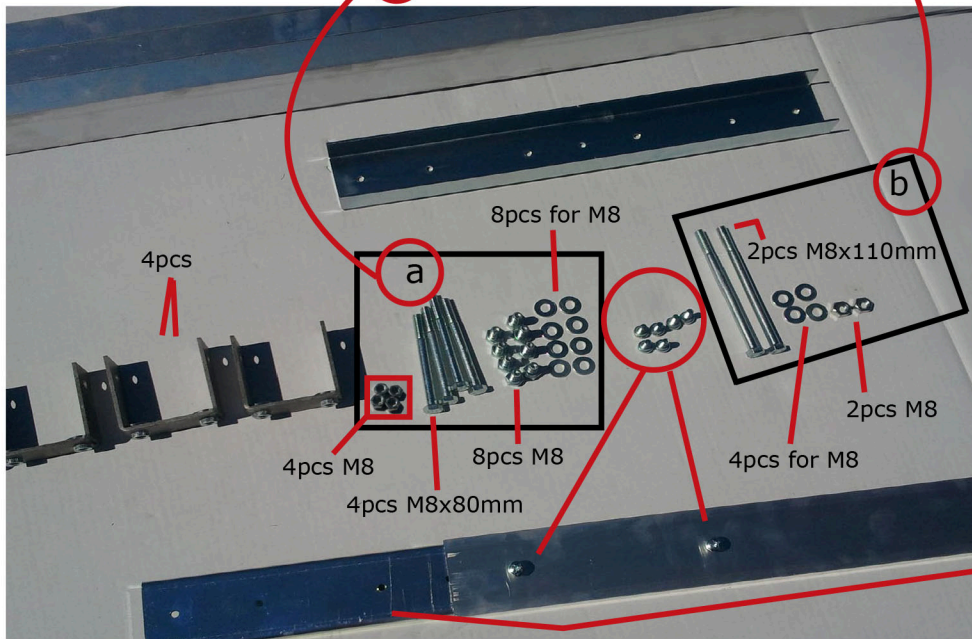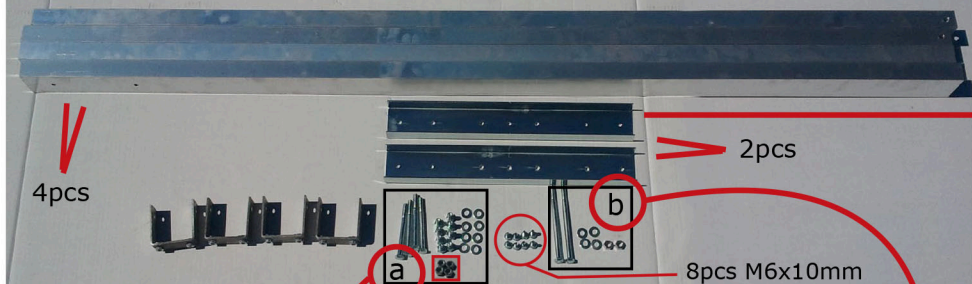

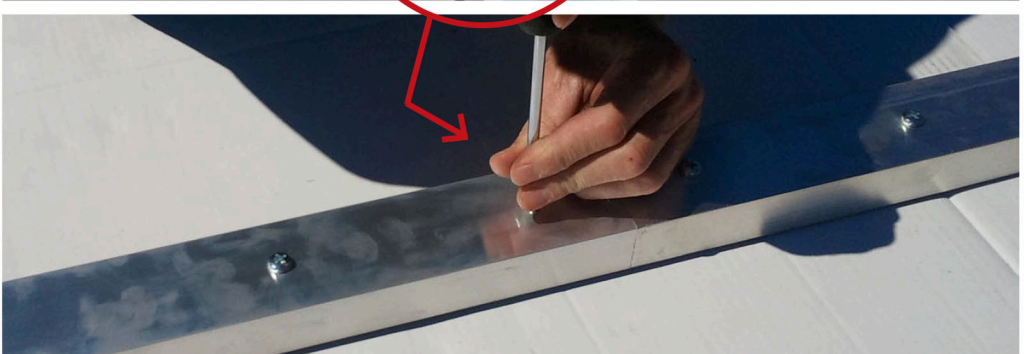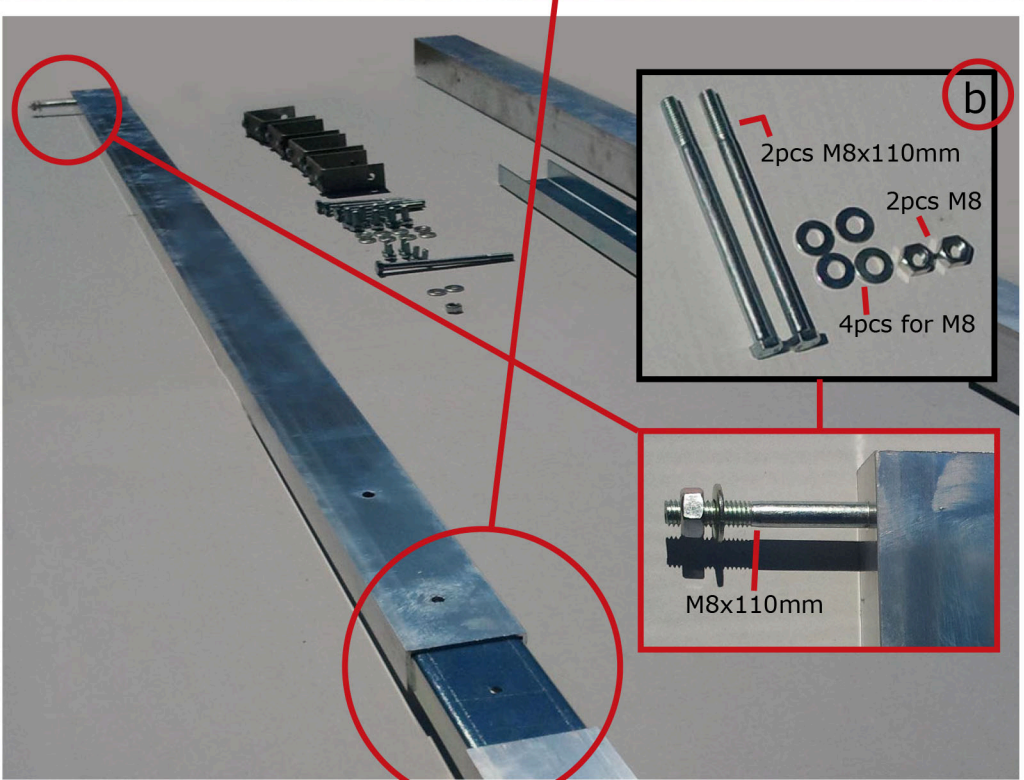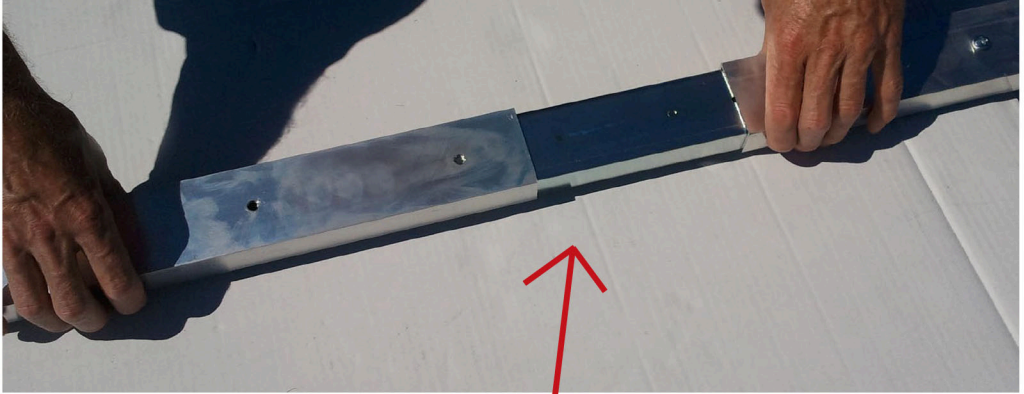

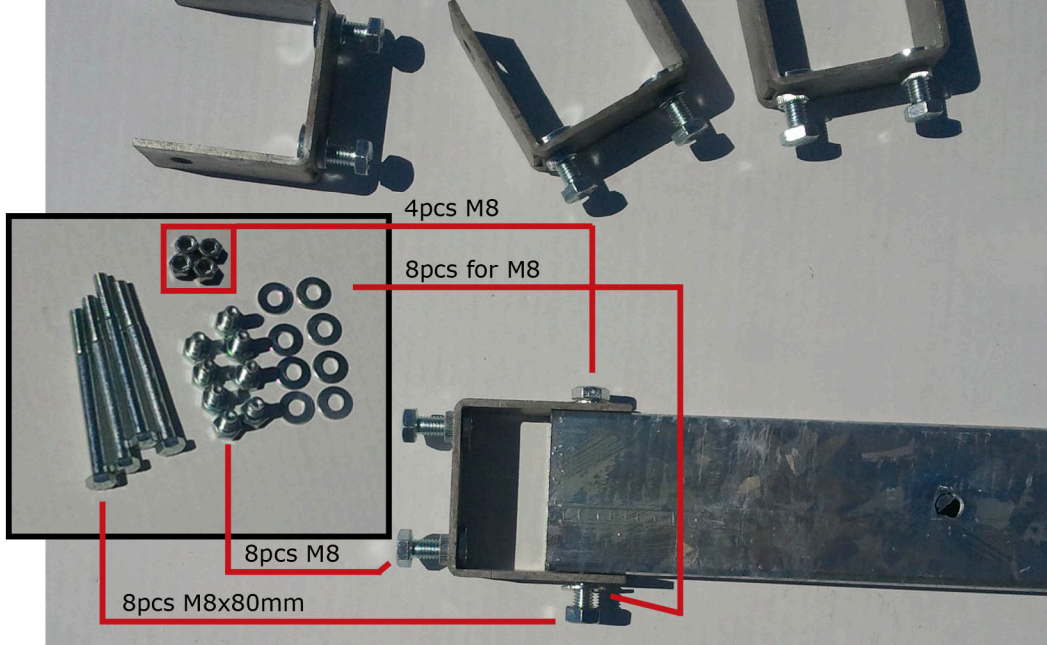



Connecting two panels

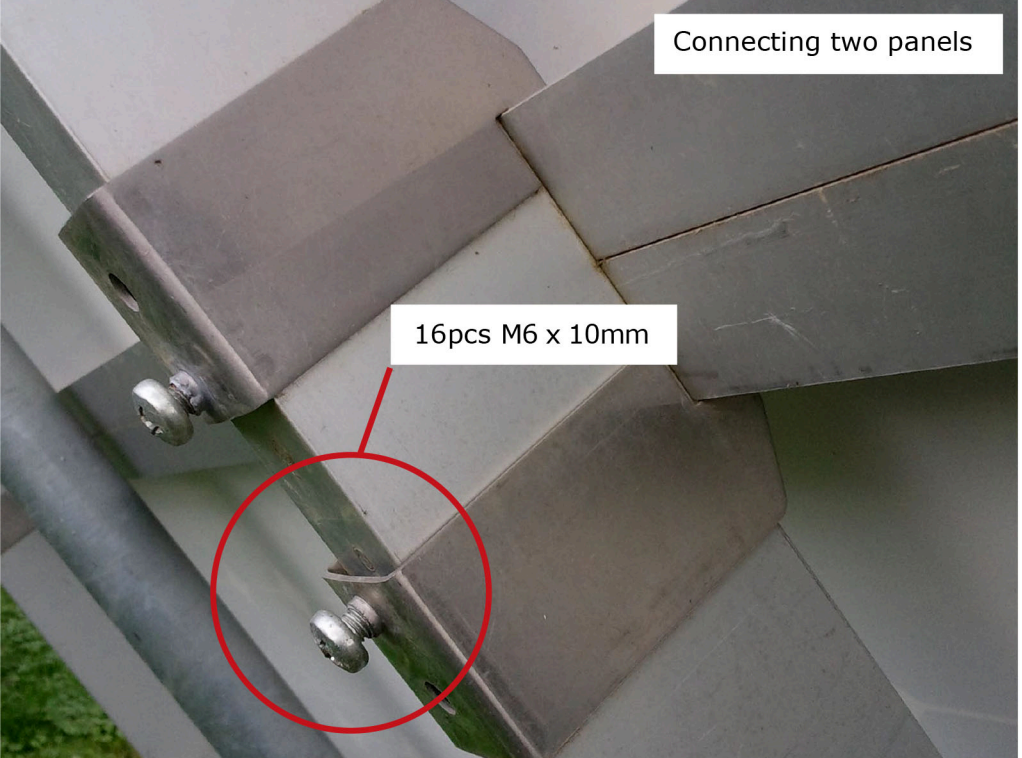


16pcs M6 x 10mm

At the end of a panel

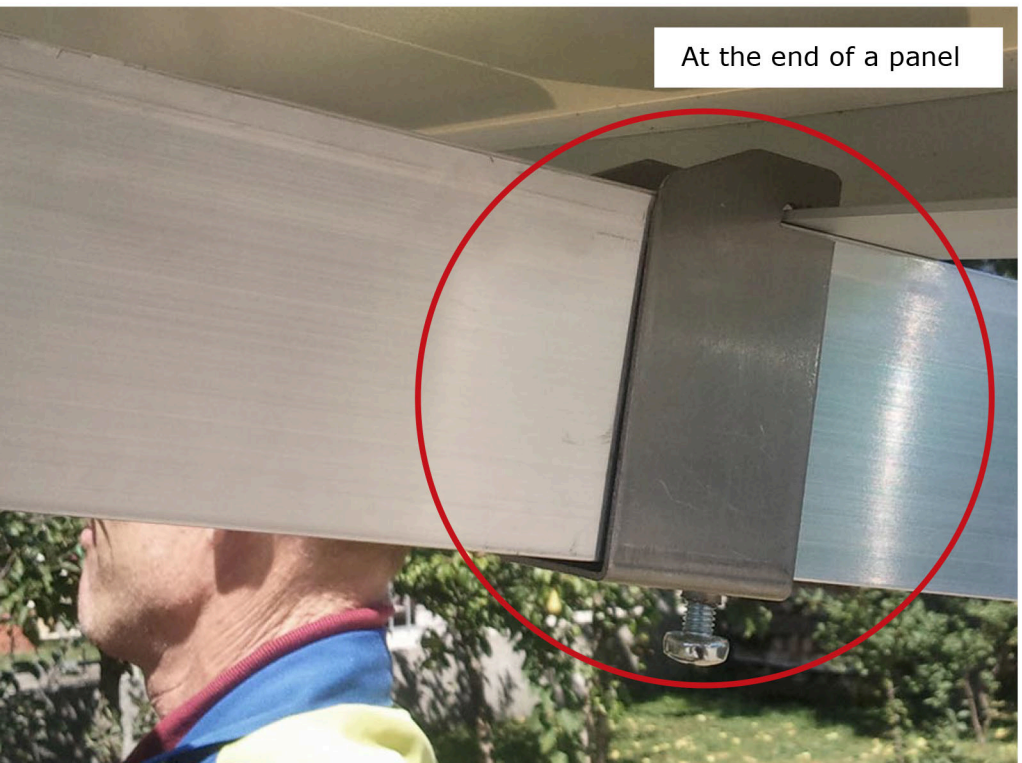


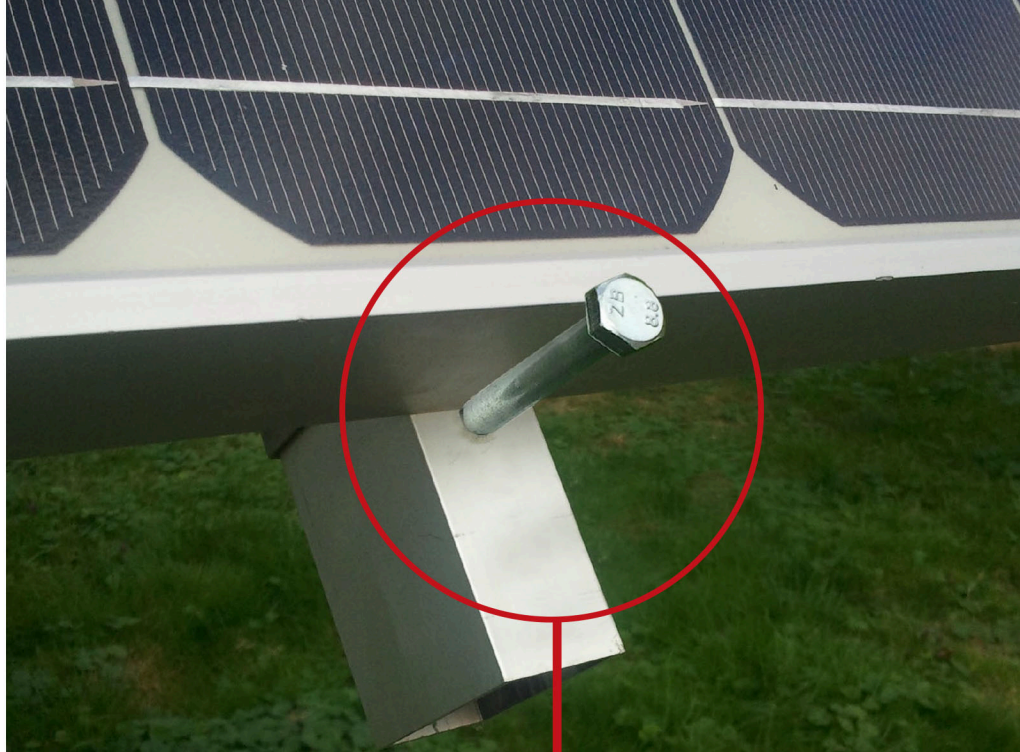

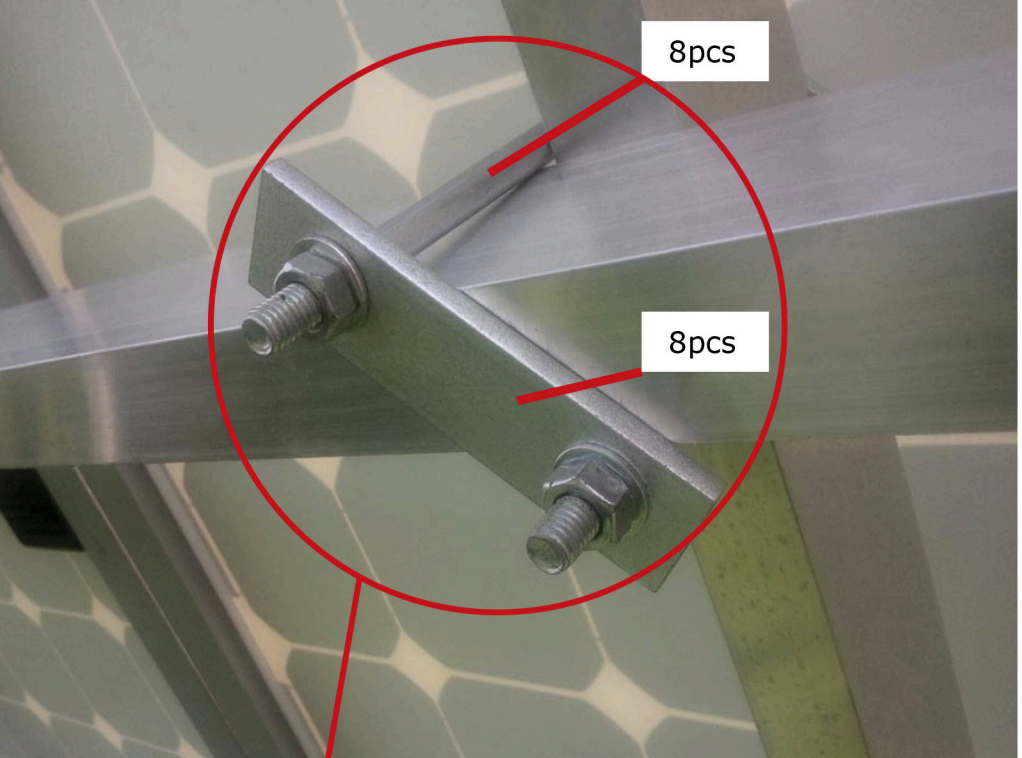



How to set the Motor Box!

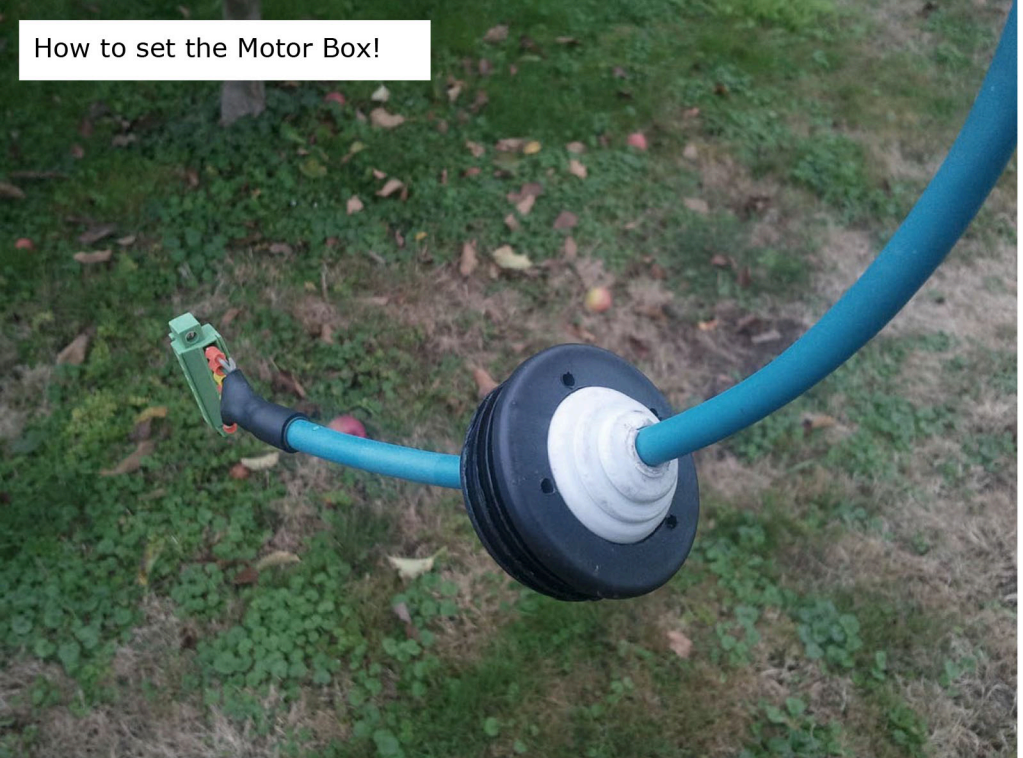

2 screws are already inside the connector





1 pcs M12 x 90mm



1 pcs M10 x 50mm



7 pcs M8 x 110mm



8 pcs M8 x 80mm



4 pcs M8 x 50mm



1 pcs



10 pcs M8 x 14mm



8 pcs M12 x 20mm



20 pcs M6 x 10mm



39 pcs M8



1 pcs M12



50 pcs M8



4 pcs M8 x 40mm




4 pcs M8 x 30mm



2 pcs M12



1 pcs Ø7mm

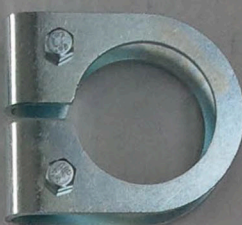


1 pcs




1 pcs



16 pcs

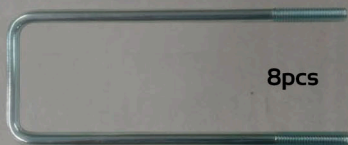

8 pcs

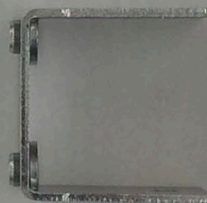


4 pcs



8 pcs



2 pcs

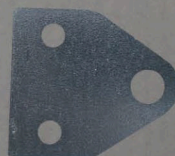


1 pcs





1 pcs

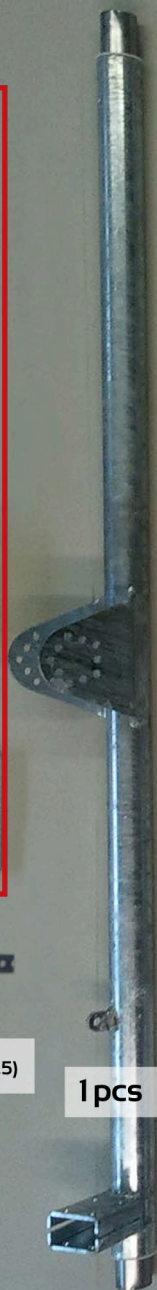

1 pcs



2 pcs




2 pcs



1 pcs



2 pcs



2 pcs



4 pcs


2 pcs




4 pcs (4,2 x 9,5)



1 pcs

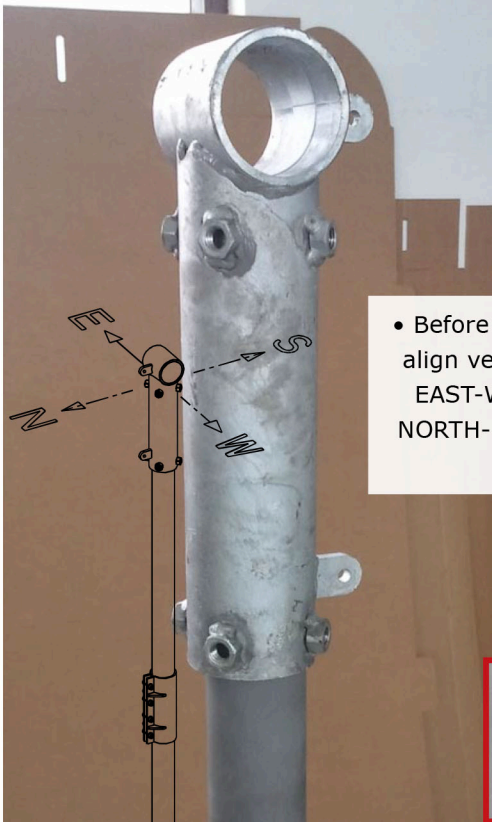

- Before you tighten screws, align vertical axis from the EAST-WEST side and the NORTH-SOUTH as shown in the figure

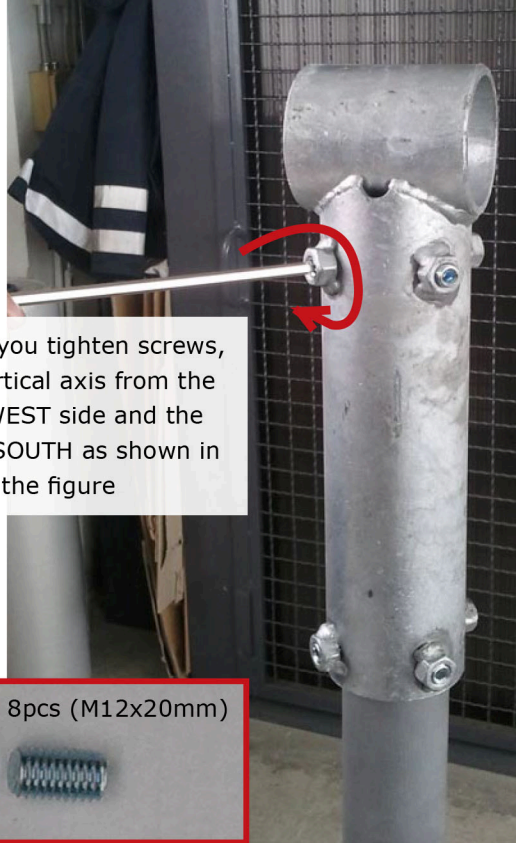

8pcs (M12x20mm)

